

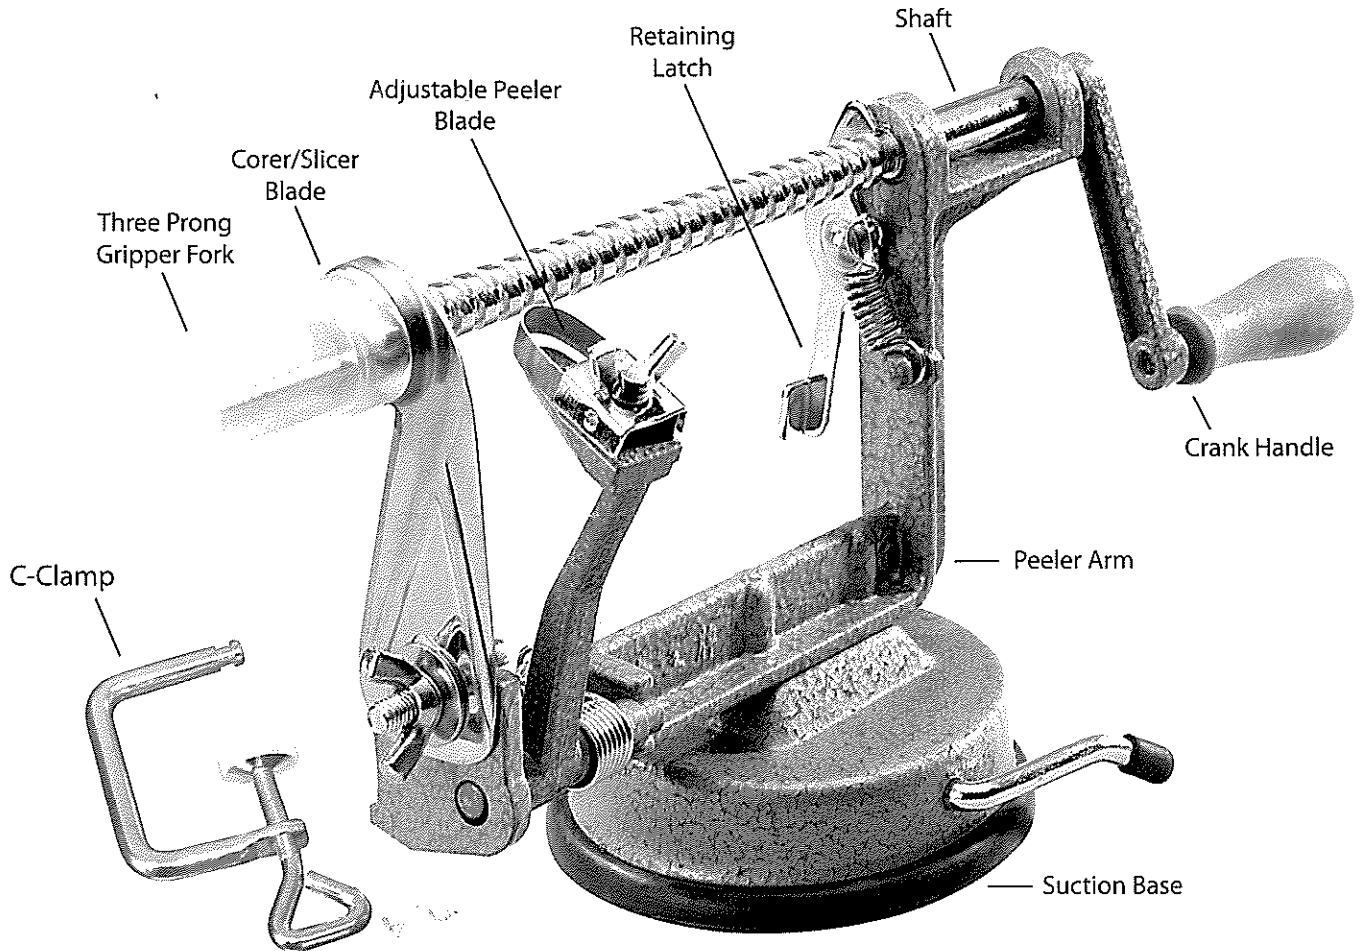
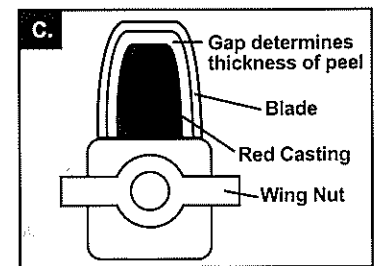


Use & Care Diagrams

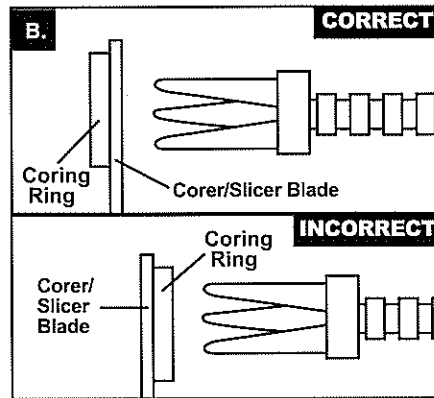

Diagrams A, B and C as referenced in Use and Care Instructions:

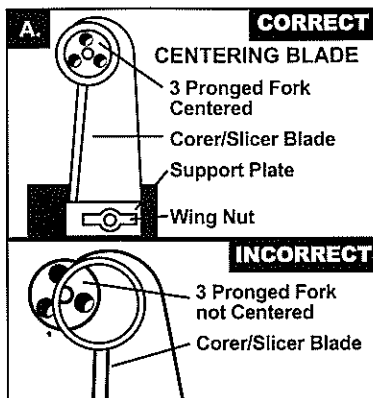

Use & Care Instructions

Apple Machine

CAUTION! Please be careful when handling this machine - blades are exposed.

SET UP

Secure machine onto a clean, dry, smooth surface such as a counter or table top by turning the lever on the Suction Base. If the surface is porous and the Suction Base will not lock securely, use the enclosed C-Clamp to connect the machine to the counter or table top.

Attach Crank Handle.

Check alignment of the Three Prong Gripper Fork and the position of the Corer/Slicer Blade. They should look like the diagrams A & B.

PEEL, CORE, AND SLICE

Release the Groove Clamp by pushing down on the Release Switch and pull the Crank Handle all the way back.

Push apple securely onto the Three Pronged Gripper Fork (either end of the apple will work.)

Simply turn the Crank Handle until the apple comes in contact with the blade. If necessary, to adjust the depth at which the blade peels the apple, loosen the wing nut on the Peeler Blade and adjust the gap between the blade and the red casting (see diagram C.) NOTE: A little adjustment goes a long way.

Remove the apple core by releasing the Groove Clamp and firmly pulling back on the Crank Handle. The apple core will pop off the Gripper Fork.

CORE AND SLICE ONLY

Carefully pull back on Peeler Arm and flip Retaining Latch to hold back Peeler Arm. Leave Corer/Slicer Blade in position.

PEEL ONLY

Remove Corer/Slicer Blade.

CLEANING

Immediately after use, rinse the machine with warm water and dry at once (better use a hair dryer). THIS MACHINE IS NOT DISHWASHER SAFE. Hand wash only.

CHANGING THE BLADES

CORER/SLICER BLADE

When attaching this blade to the frame, make sure the Three Prong Gripper Fork is all the way forward by releasing the Groove Clamp.

Fit and center Corer/Slicer Blade over Three Prong Gripper Fork and support plate with the wing nut and hole. Tighten wing nut (see diagram A.) NOTE: It is very important to attach the blade with the Coring Ring facing out, not facing toward the prongs (see diagram B.)

PEELER BLADE

Loosen wing nut to replace or adjust blade. Blade can be adjusted for minimum to maximum peel thickness (see diagram C.)

Problem	Solution
Won't peel	Three prong gripper fork must be centered through corer/slicer blade as in diagram A and peeling blade is set as in diagram C.
Still won't peel	Adjust blade (see diagram C) by increasing gap no further than 1/16" at a time. If the gap is too big, it will gouge the apple.
Fruit breaks up before completion	Fruit is too soft. Use only fresh, firm fruit.
Fruit is not slicing	Corer/slicer blade is on backwards (see diagram B.)